

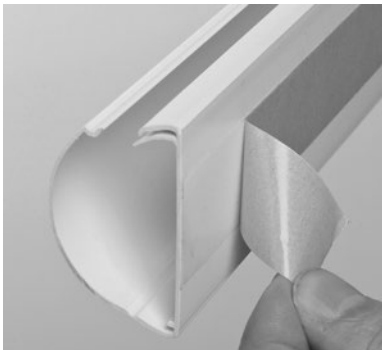
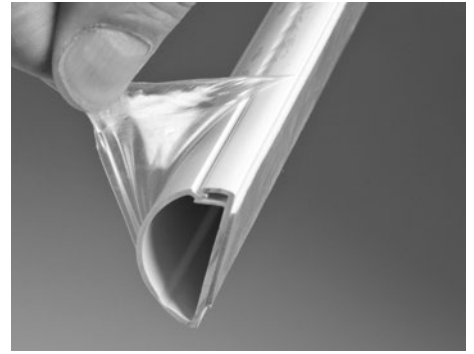


## Fitting Guide for ½ round TV Drop D-Line

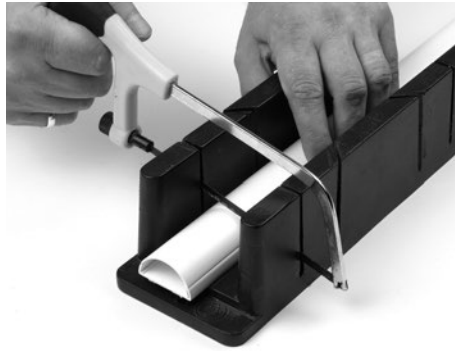

- Measure length(s). Pencil mark where cut is required.
- Use a mitre block and junior hacksaw to cut at the outer edge of the pencil mark.
- Remove the protective film cover.
- **Because of the weight of the length, and the type of cables usually inserted, we recommend that TV drops are drilled and screw fixed.**
- As a guide to make positioning the lengths easier, installers can use the self adhesive tape to peel & stick.
- Take care when positioning lengths, as a strong bond will be created with the surface.
- Any horizontal runs should be fixed with the click lock at the top and the hinge at the base.

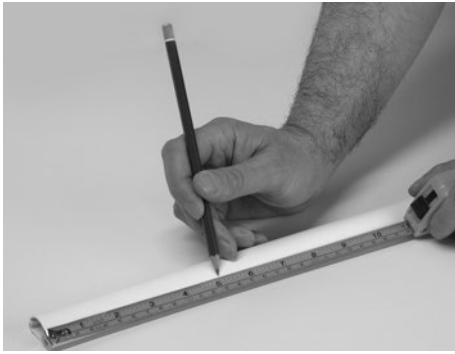

### After Care



D-Line can accept gloss or emulsion paints...  
For best results use fine sandpaper to key the surface prior to painting.

**Important:** If using D-Line for 240v mains cables it is recommended you leave 45%+ of internal capacity for air circulation.